RF RGB Remote Controller


09.02839.04231


Product Data

W	Œ	F©	
---	---	----	--

Important: Read All Instructions Prior to Installation

Function introduction

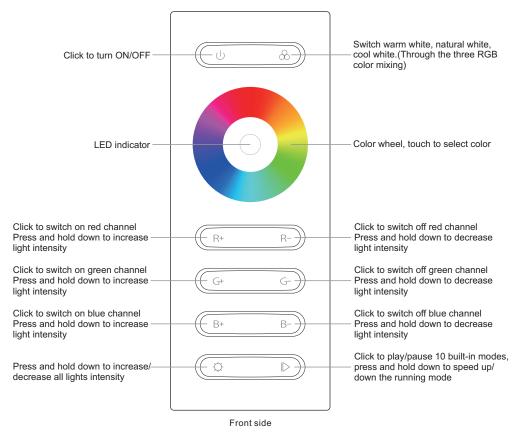

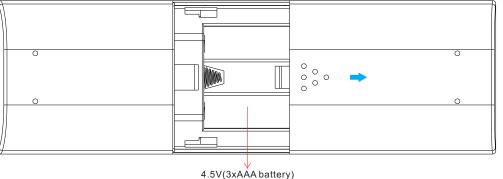

Output	RF signal	 Control 1 zone of RF receiver RGB color controller Compatible with universal serie RF receiver 1 receiver can be paired by max 8 different remote controls. Waterproof grade: IP20 		
Operation Frequency	868/915/434MHz			
Power Supply	4.5V(3xAAA battery)			
Operating temperature	0-40°C			
Relative humidity 8% to 80%				
Dimensions	120x48x17.6mm			

Safety & Warnings

• This device contains AAA batteries that shall be stored and disposed properly.

• DO NOT expose the device to moisture.

Pair with RF receiver



Step 1:Do wiring the RF receiver according to wiring diagram(please refer to the instruction of RF receiver that you would like to pair with.



Step 2: Click the "RF Code Key" button on RF receiver to set it into pairing status


Step 3:Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with the remote successfully.

Note: one receiver can be paired with max 8 remote controls.



Important: Read All Instructions Prior to Installation

Function introduction

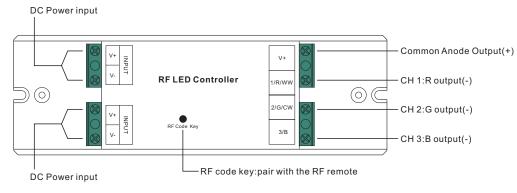


Product Data

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)	• Radio Frequency : 868mhz
12-24VDC	3x5A	3x(60-120)W	Constant voltage	145x46.5x16mm	 Waterproof grade: IP20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring Diagram

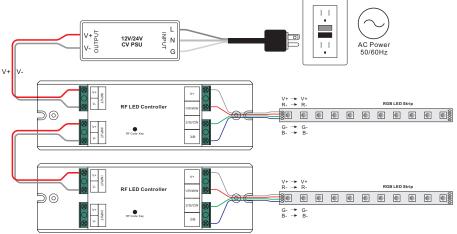

Pair/delete the pairing with RF remote

1.Do wiring according to connection diagram.

2.Pair RF Receiver with RF remote: please refer to the instruction of the remote that you would like to pair with. 3.Delete the pairing:

(1)Wire up the RF receiver correctly, power on.

(2)Press and hold down the "**RF Code Key**" button on receiver for over 3 seconds until the connected light flashes, which means well deleted.